

# OWNER'S MANUAL

**B-AIR BLOWER**

**BEAR POWER**

**MODEL # BP-2**

CE



## INTRODUCTION

- OPERATION
- SAFETY
- SERVICE
- WARRANTY
- CONTACT
- SPECIFICATIONS
- TROUBLESHOOTING

PLEASE READ AND SAVE THESE  
INSTRUCTIONS

## **INTRODUCTION TO B-AIR BP-2**

YOUR NEW **B-AIR BP-2 BLOWER** HAS A POWERFUL 2 HP MOTOR, WHICH HAS STATE OF THE ART CONSTRUCTION AND SCREENS ON OPEN VENTS FOR SAFETY AND LONG LIFE. THE HANDLES ARE DESIGNED FOR EASY CARRYING AND THE UNITS ARE ALSO STACKABLE FOR SPACE EFFICIENCY.

## **OPERATION/USE**

**THIS BEAR POWER BLOWER IS DESIGNED TO INFLATE LARGE INFLATABLE PLAY STRUCTURES, AND IS ALSO SUITABLE FOR A VARIETY OF OTHER APPLICATIONS THAT REQUIRE HIGHER STATIC PRESSURE.**

- A) CAREFULLY PLACE THE B-AIR UNIT ON STABLE FLAT DRY SURFACE-KEEPING CHILDREN AWAY.
- B) ATTACH AN INFLATABLE TUBE AROUND THE EXHAUST OPENING USING STRAPS OR ANY OTHER FORM OF TIGHTENER.
- C) PLUG CORD INTO A GROUNDED GFCI OUTLET ONLY.
- D) TURN ON SWITCH AND MAKE SURE IT IS OPERATING CORRECTLY.
- E) ALL BLOWERS IN OPERATION MUST BE SUPERVISED AT ALL TIMES.

## **STORAGE**

**STORE UNIT INDOORS IN A CLEAN DRY ENVIRONMENT TO ENSURE LONG LIFE**

## **WARNING**

**ALL BLOWERS IN OPERATION MUST BE SUPERVISED AND ATTENDED AT ALL TIMES.**

**THE USE OF A 3-PRONG TO 2-PRONG ADAPTER IS PROHIBITED. ONLY USE A 2-PRONG TO 2-PRONG ADAPTER.**

**IF THE POWER SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.**

## **SAFETY**

- 1) BLOWER MUST HAVE BACK PRESSURE, MEANING IT MUST BE ATTACHED TO AN INFLATABLE OR DUCT TO AVOID ANY DAMAGE TO MOTOR.
- 2) KEEP CHILDREN AWAY FROM UNIT AT ALL TIMES WHILE IN OPERATION AND/OR PLUGGED IN.
- 3) DO NOT PUT FINGERS OR OTHER OBJECTS IN UNIT WHILE IN OPERATION AND/OR PLUGGED IN.
- 4) DO NOT OPERATE IN POOLED WATER TO AVOID ELECTRIC SHOCK.
- 5) MOTOR MUST BE KEPT DRY AT ALL TIMES. IF UNIT BECOMES WET, THOROUGHLY DRY BEFORE NEXT OPERATION.
- 6) INDOOR USE: USE ONLY WITH A GROUNDED PLUG AND/OR EXTENSION CORD TO AVOID RISK OF ELECTRICAL SHOCK OR FIRE. REMEMBER NEVER TO USE A CORD WITH ANY KIND OF DAMAGE OR WEAR.
- 7) MAKE SURE THE POWER SOURCE IS SUFFICIENT TO MEET THE REQUIREMENTS OF THE BLOWER.
- 8) KEEP AIR INTAKES CLEAR AT ALL TIMES TO AVOID CLOGGING OR BLOCKING IN ORDER TO PREVENT OVERHEATING THE UNIT. BLOCKING THE AIR INTAKES COULD RESULT IN A FIRE OR ELECTRICAL HAZARDS.
- 9) DO NOT REMOVE ANY SCREENS OR SAFETY GUARDS FROM THIS UNIT TO PREVENT INJURY TO PERSONS, AND TO AVOID OBJECTS FROM COMING IN CONTACT WITH THE BLOWER WHEEL. UNIT DAMAGE IN THIS MANNER WILL VOID YOUR WARRANTY.
- 10) DO NOT OPERATE UNIT CLOSE TO ANY DANGEROUS AREAS, SUCH AS EXPLOSIVE GASES, FLAMMABLES, HEATERS AND VENTILATED ENVIRONMENT, WHICH MAY RESULT IN EXPLOSIONS OR ELECTRICAL HAZARDS.
- 11) DO NOT USE ANY FORM OF SPEED CONTROL DEVICE AS DOING SO MAY RISK INJURY OR FIRE.
- 12) ALWAYS PLACE BLOWER ON A SMOOTH AND LEVELED SURFACE FOR SAFE OPERATION.
- 13) DO NOT OPERATE IN STACKED POSITION.
- 14) DO NOT USE UNIT IF DAMAGED.
- 15) BEFORE CLEANING OR SERVICING UNPLUG UNIT.
- 16) ALL BLOWERS IN OPERATION MUST BE SUPERVISED AT ALL TIMES.

## **WARRANTY**

### **1 YEAR:**

**B-AIR WILL COVER ALL PARTS (EXCEPT POWER CORD).  
WHITHIN ONE YEAR OF PURCHASE B-AIR WILL PAY REPAIR COSTS AND  
ONE WAY UPS GROUND SERVICE SHIPPING TO YOUR LOCATION  
WHITHIN THE 48 CONTIGUOUS STATES. PROOF OF PURCHASE IS  
REQUIRED.**

**CUSTOMER IS RESPONSIBLE FOR SHIPMENT OF DAMAGED UNIT TO B-  
AIR WAREHOUSE FOR REPAIR.  
CANADA AND NON-CONTIGUOUS STATES MUST PAY FREIGHT BOTH  
WAYS.**

### **5-YEAR:**

**B-AIR WILL COVER HOUSING FROM DATE OF ORIGINAL PURCHASE.  
PROOF OF PURCHASE IS REQUIRED.**

## **SERVICE**

**IN ORDER TO RECEIVE SERVICE OR REPLACEMENT PARTS UNDER  
WARRANTY, YOU MUST:**

- A) CALL FOR A RMA# (Return Merchandise Authorization Number)**
- B) HAVE PROOF OF PURCHASE**
- C) SHIP TO B-AIR BLOWER**
  - IF IMMEDIATE SERVICE IS REQUIRED, B-AIR WILL SHIP A  
REFURBISHED BLOWER IMMEDIATELY TO REPLACE THE  
ONE REQUIRING SERVICE PROVIDED A VALID CREDIT CARD  
IS PROVIDED AND CHARGED. ONCE WE RECEIVE YOUR  
BLOWER, WE WILL CREDIT YOUR CREDIT CARD ACCOUNT.**
  - WE WILL GLADLY REPAIR YOUR BLOWER AND SHIP WITHIN  
24 HOURS.**

**UPON INSPECTION, WE WILL ADVISE YOU OF THE REPAIRS NEEDED  
AND THE COST (IF APPLICABLE).  
B-AIR WILL ISSUE REPAIR OR REPLACEMENT PARTS DEPENDING ON  
WARRANTY.**

## **CORDS**

- 1) DO NOT USE EXTENSION CORDS FOR OUTSIDE USE.
- 2) USE 3 PRONG ADAPTORS THAT ARE **UL** AND **CE** APPROVED AND NOT LESS THAN 14-3 WITH GROUND FAULT CIRCUIT INTERRUPTER (GFCI).
- 3) DO NOT USE CORDS THAT SHOW ANY KIND OF WEAR OR DAMAGE.
- 4) CORDS ARE NOT COVERED BY WARRANTY.

## **B-AIR BLOWERS LIMITED WARRANTY**

### **COVERS**

- 1) B-AIR BLOWERS ARE COVERED AGAINST DEFECTS IN MATERIAL AND CRAFTSMANSHIP USED UNDER NORMAL INTENDED USE TO ORIGINAL PURCHASER FOR A TERM OF (1) ONE-YEAR FROM THE ORIGINAL DATE OF PURCHASE.
- 2) B-AIR BLOWERS HOUSING IS COVERED FOR A TERM OF (5) FIVE FULL YEARS FROM THE DATE OF THE ORIGINAL PURCHASE.

### **DOES NOT COVER**

- 1) ANY SIGNS OF MISUSE INCLUDING; BUT NOT LIMITED TO ROUGH HANDLING, ABUSE, TAMPERING, IMPROPER VOLTAGE USE, UNAUTHORIZED MAINTENANCE AND REPAIRS.

## **CONTACT**

**INTERTEX, INC. / B-AIR BLOWERS**  
**1851 TYBURN STREET**  
**GLENDALE, CA 91204**  
**1-877-800-2247 (BAIR)**  
**FAX: (818) 242-2430**  
**EMAIL: [info@b-air.com](mailto:info@b-air.com)**  
**WEB SITE: [www.b-air.com](http://www.b-air.com)**

## **SPECIFICATIONS**

### **MODEL: BP-2**

VOLTAGE	115 V	230 V
CYCLE	60 Hz	50 Hz
MAX AIR VOLUME	1430 CFM	1360 CFM
AMPS	12 A	9.8 A
MAX STATIC PRESSURE	9.0 INCH	7.7 INCH
WEIGHT NET/ GR	43/47 LBS	43/47 LBS
UNIT SIZE (LxWxH)	20.5"x16"x18"	20.5"x16"x18"
WHEEL SPEED (RPM)	3400	2850
MOTOR	2 HP	2 HP
ATTACHED CORD (14G)	25 FT	25 FT

## **TROUBLESHOOTING**

<u>PROBLEM</u>	<u>POSSIBLE CAUSE</u>	<u>SOLUTION</u>
Motor Not Running	a) Switch is OFF	a) Turn Switch ON
	b) Bad Outlet	b) Check Outlet/ Change to Another Outlet
	c) Faulty Switch/Cord	c) Call Factory for new Switch/Replace Cord
Scraping Noise From Blower	a) Wheel Out Of Line	a) Call Factory for Replacement Advise
Weak Air Flow	a) Obstructed Vents/Inlets	a) Clean Out Vents/Inlets